



# OPERATION & MAINTENANCE MANUAL

eco-SPRAY



| 1 | Introduction |  |    |  |  |  |  |
|---|--------------|--|----|--|--|--|--|
|   | 1.1          | Delivery package   | 4  |  |  |  |  |
|   | 1.2          | Incoming inspection  | 5  |  |  |  |  |
| 2 | Safety       |  |    |  |  |  |  |
|   | 2.1          | Explanation of symbols used  | 6  |  |  |  |  |
|   | 2.2          | Intended use   | 7  |  |  |  |  |
|   | 2.3          | Personnel  | 8  |  |  |  |  |
|   |              | 2.3.1 Operators  | 8  |  |  |  |  |
|   |              | 2.3.2 Maintenance staff  | 8  |  |  |  |  |
|   | 2.4          | Informal safety precautions  | 8  |  |  |  |  |
|   | 2.5          | Preventing damage to equipment                                       | 9  |  |  |  |  |
|   | 2.6          | Organisational safety measures                                       | 10 |  |  |  |  |
|   | 2.7          | Residual risks1  |    |  |  |  |  |
|   | 2.8          | Transport and storage  | 12 |  |  |  |  |
| 3 | Prod         | uct description  | 13 |  |  |  |  |
| 4 | Ope          | ration   | 14 |  |  |  |  |
|   | 4.1          | Initial commissioning  | 14 |  |  |  |  |
|   |              | 4.1.1 Disassembling the dispenser                                    | 14 |  |  |  |  |
|   |              | 4.1.2 Fitting the stator   |    |  |  |  |  |
|   |              | 4.1.3 Connecting the dosing unit to the drive unit                   | 15 |  |  |  |  |
|   |              | 4.1.4 Feeding material and bleeding the dispenser for the first time |    |  |  |  |  |
|   |              | 4.1.5 Calibration  | 17 |  |  |  |  |
|   | 4.2          | Switching on, starting dosing process                                | 17 |  |  |  |  |
|   | 4.3          | Switching off, ending dosing process                                 | 17 |  |  |  |  |
|   | 4.4          | Decommissioning  | 18 |  |  |  |  |
|   | 4.5          | Re-commissioning   | 18 |  |  |  |  |



| 5 Maintenance |                          |                                     |    |  |  |  |
|---------------|--------------------------|-------------------------------------|----|--|--|--|
|               | 5.1                      | Maintenance intervals               | 19 |  |  |  |
|               | 5.2                      | Troubleshooting                     | 20 |  |  |  |
|               | 5.3                      | Stator change                       | 21 |  |  |  |
|               | 5.4                      | Dismantling before cleaning         | 22 |  |  |  |
| 6             | Clea                     | aning                               | 23 |  |  |  |
| 7             | Spare parts              |                                     |    |  |  |  |
|               | 7.1                      | Item list of the spare parts        | 24 |  |  |  |
|               | 7.2                      | Overview drawing of the spare parts | 25 |  |  |  |
| 8             | Technical specifications |                                     |    |  |  |  |
|               | 8.1                      | Installation declaration            | 26 |  |  |  |
|               | 8.2                      | Technical data                      | 27 |  |  |  |
|               | 8.3                      | Materials used                      | 28 |  |  |  |
|               | 8.4                      | Dimensions                          | 28 |  |  |  |
| 9             | Disp                     | oosal                               | 29 |  |  |  |
| 10            | Accessories              |                                     |    |  |  |  |

## 1 Introduction

Dear customer,

We are delighted that you have decided to purchase a ViscoTec product. We have no doubt that this product will meet all your requirements. We wish you trouble-free and successful operation.


The fine-spray system consists of the dispenser eco-SPRAY, the dosing control unit eco-CONTROL EC200 and the control unit eco-CONTROL SC1200.

The eco-SPRAY dispenser is described in this operation manual. There are separate operation and maintenance manuals for the dosing control unit and the control unit.

# 1.1 Delivery package

The scope of supply includes:

- 1 eco-SPRAY (A)
- 1 stator (B)
- 1 nozzle mounting tool (C)
- 1 assembly aid (D)
- 1 screwdriver (E)
- 1 allen wrench (F)
- 3 air caps (G)\*
- 3 precision dosing needles (H)\*
- 1 connecting cable (1.5 m)
- 1 Operation & maintenance manual

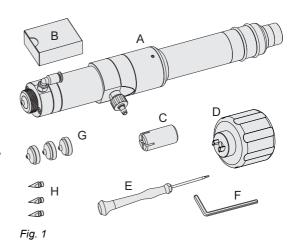

<sup>\*1</sup> unit pre-mounted



## 1.2 Incoming inspection

Damage in transit can lead to malfunctions, and consequently to personal injury and damage to property. Damaged components must not be put into operation.

Check the delivery immediately on receipt for damage in transit and damage to the packaging. Check that the delivery is complete according to the enclosed delivery note. Make sure you have not left any part of the delivery in the packaging.

Compensation for damage during transport may be claimed only if the carrier is notified immediately.

# 2 Safety

## 2.1 Explanation of symbols used

The following symbols are used in this manual:

Work step

List

Fig. 1 Legend number, reference to a figure

\* Reference to a comment

**COMMAND** Designations of buttons/switches, menu items and input dialogs

The following notices indicate safety instructions and must be followed:



indicates a hazardous situation which, if not avoided, will result in death or serious injury.

## **⚠** WARNING

indicates a hazardous situation which, if not avoided, may result in death or serious injury.

## **↑** CAUTION

indicates a hazardous situation which, if not avoided, may result in minor injury.

#### NOTE

indicates a technical tip to avoid damage to property or equipment.

This manual is structured so that text and the related figure are on the same page as far as possible. In this way the information can be understood quickly. If reference is made to a component in a figure, the part has a key number.



#### 2.2 Intended use

The dispenser eco-SPRAY is designed for precision spraying of viscous materials. The dispenser eco-SPRAY is controlled by means of the dosing control unit eco-CONTROL EC200 and the control unit eco-CONTROL SC1200.

Using a material that creates a highly flammable mixture (aerosol) when sprayed is not permitted.

Check the chemical resistance of the materials that are in contact with the material before commissioning. Information on the materials can be found in the order confirmation or in Section 8.3 "Materials used" (page 28).

No liability can be accepted for damage caused by failure to observe this operation manual or due to a lack of maintenance or checks.

#### Misuse

Any use other than the stipulated intended use shall be considered as misuse.

This includes

- · use outside the permissible operating limits
- · use in explosive environments
- · use underground
- · use outdoors

Misuse also includes the following actions carried out without the explicit written approval of the manufacturer:

- · Conversions and/or extensions
- Use of non-original spare parts (e.g. rotor)
- Repairs carried out by unauthorised companies or persons
- Use of non-approved materials

Misuse is not permissible, and will result in voiding of guarantee, warranty and liability claims.

#### 2.3 Personnel

The operating organisation shall ensure that only appropriately qualified and authorised personnel work on this machine. It is responsible for ensuring that operators and maintenance staff possess the necessary qualifications. Personnel must be at least 15 years old.

All personnel working with or on the machine must have read and understood this operation manual.

The operating company shall document the operators' and maintenance staff's acknowledgement of this manual, and shall ensure their compliance with it by means of regular training.

#### 2.3.1 Operators

Before starting work, the personnel assigned as operators must be adequately instructed regarding the nature and scope of their duties and the potential risks. Training shall be conducted on a regular basis (at least once a year). Training shall be conducted after any technical modifications.

#### 2.3.2 Maintenance staff

The maintenance and repair staff must be authorised and

- · adequately trained for the relevant activities
- familiar with and comply with the applicable technical rules and safety regulations

Competent personnel are persons who, by virtue of their training, experience and knowledge of the relevant requirements, standards and safety regulations, can carry out the necessary activities while recognising and avoiding potential hazards.

## 2.4 Informal safety precautions

The following documents must be read, understood and followed. They must always be available at the machine's operating location, and must be kept in legible condition:

- The operation manual for this product
- Generally applicable and local accident prevention and environmental protection regulations
- Safety data sheets for the conveyed materials, as well as for any cleaning products or lubricants being used



## 2.5 Preventing damage to equipment

In order to prevent damage to equipment and to ensure precision dosing, note that

- the dispenser must never be operated without material (the stator will be destroyed)
- the material inlet (feed) and the material outlet must never be closed during operation
- the precision dosing needle is not damaged or clogged
- the dispenser is operated with a positive feed (inlet pressure)
- · there is adequate inlet pressure when conveying highly viscous material
- when pumping without a positive feed (inlet pressure), no dry running or cavitation of the dispenser occurs
- the direction of rotation of the drive is always the same as the direction of flow of the dispenser
- · the specifications in the product data sheet for the material are observed and adhered to

## 2.6 Organisational safety measures

#### **DANGER**

#### Highly flammable mixture

Spraying certain materials can create a highly flammable mixture (aerosol). If the mixture ignites, this can lead to death or serious injuries.

A material that creates a highly flammable mixture when sprayed must not be used.

Whether the material is suitable for spraying must be clarified by the operating organisation with the manufacturer of the material in advance.

As a preventive safety measure, make sure that

- sufficient aeration and ventilation are provided during the spraying process
- there are no sources of ignition in the working area during spraying
- no cleaning agents are sprayed

The necessary personal protective equipment must be provided by the operating organisation. Personal protective equipment must be worn when carrying out all work and procedures.

To ensure the provision of suitable personal protective equipment, the safety data sheet for the conveyed material must be observed. Specifications for e.g. cleaning products and lubricants must also be checked and observed.

All personal protective equipment must be checked to ensure it is working properly before starting work.



Eye protection



Hand protection



Body protection



Hearing protection



Respiratory protection



Foot protection



#### 2.7 Residual risks

Thorough training, observance of the operation manual and compliance with safety regulations are key to permanently accident-free operation.

The following residual risks may occur when operating this machine:



#### Material hazardous to health

The conveyed material may contain constituents which are hazardous to health. Such constituents may cause serious acute or chronic harm to health if they come into contact with skin, are inhaled or swallowed.

- · Always wear appropriate protective equipment
- Observe the specifications in the safety data sheet for the material



#### Risk of injury from moving components

The machine is driven by an electrical drive unit. These generate very high forces. Touching the components during operation may result in serious injuries.

- Do not operate the machine unless there is unrestricted visual contact with the moving component
- There must be no persons or foreign objects in the danger area

#### **WARNING**

#### Pressurised material

Depending on the setting of the machine, the material is conveyed under very high pressure. If the delivery rate is not adapted to the dosing needle being used, unwanted spraying of the material might occur. This may result in serious injury. Defective components can also cause spraying.

- · Shut down the machine immediately
- · The leak must be repaired by qualified maintenance staff before operation is re-started



#### Splashing material

During initial commissioning and after being refilled, air bubbles in the material could cause an uncontrollable spraying from the conveying area. This may result in injury.

- · Always wear appropriate protective equipment
- · Fully bleed the system before start of production

## 2.8 Transport and storage

The following ambient conditions must be observed for transportation and storage:

- Temperature within the range -10 °C to +40 °C (263 K to 313 K)
- Relative air humidity less than 60 % (non-condensing)
- · Uniform room climate
- · Dry and free of dust
- · No exposure to direct sunlight
- No aggressive, corrosive substances (solvents, acids, alkalis, salts, etc.) in the environment

For storage always remove the stator and store separately (at 15–20° C).



# 3 Product description

The dispenser has been developed and tested for precision spraying of materials ranging from low to high viscosity with extremely high repeat accuracy.

The dispenser supplies a precisely defined volume (dosing quantity) for each spraying process.

preeflow dispensers are positive displacement pumps. The conveying elements comprise a rotating part, the "rotor", and a stationary part, the "stator". The rotor, which is in the form of a type of knuckle thread, rotates inside the stator, which has one more thread turn and twice the pitch length of the rotor. As a result, conveying areas are produced between the stator and the rotor rotating inside the stator. The rotor also moves radially within the stator.

The conveying spaces move forward continuously due to the movement. The flexible shaft used to drive the rotor compensates for the eccentric movement of the rotor and is completely maintenance-free.

The sealing effect of the conveying elements of the dispenser is dependent on the viscosity and pressure.

The dispenser can be dismantled very quickly.

Compressed air is required for the spraying process. This is controlled by means of the control unit eco-CONTROL SC1200. When combined with the dosing control unit eco-CONTROL EC200, it is possible to configure various settings (e.g. pre-/follow-up spraying without material).

#### Air cap / precision dosing needle combinations

We recommend selecting the air cap (29) with the corresponding precision dosing needle (28) depending on the viscosity of the material.

The appropriate combination must be selected and tested separately for each application (viscosity, dosing quantity/time and temperature).

Specifications:

Hole diameter in mm

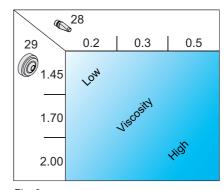


Fig. 2

# 4 Operation

## 4.1 Initial commissioning

All activities described below may only be carried out by qualified staff.

When delivered, the stator is not installed so as to avoid bearing damage to the elastomer of the stator.

#### 4.1.1 Disassembling the dispenser

- ▶ Loosen the two grub screws (14) by approximately three rotations and remove the drive unit (11) from the bearing housing (13).
- Plug the star-shaped coupling (5) into the bearing housing (13).
- Undo the cap nut (2).
- Remove the air cap (29). The seal (30) remains either in the spray head or stuck to the air cap (29).
- Carefully attach the nozzle mounting tool (31) to the precision dosing needle (28) and unscrew the precision dosing needle.
- Unscrew 2 screws (8) and remove the air housing (3).
- Unscrew 4 screws (8) and remove the end piece (27).


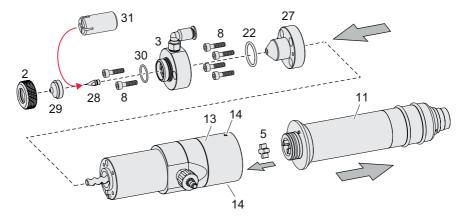


Fig. 3



#### 4.1.2 Fitting the stator

- Coat the rotor (4) with material or a suitable lubricant.
- ➤ Turn the stator (7) in the correct position (see detailed view) on the rotor (4) until the dowel pin (8) begins to dip into the keyway (9).
- Lightly press the stator (7) towards the pump housing (19) and turn the assembly aid (6) in the direction of the arrow until the stator (7) has been guided into the pump housing (19).

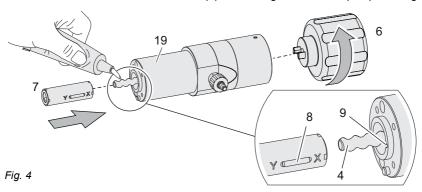


#### **Assembly**

The parts are assembled by following these instructions in reverse order. Do not exceed a tightening torque of 0.35 Nm when mounting the screws (8).

## 4.1.3 Connecting the dosing unit to the drive unit

- ▶ Attach the star-shaped coupling (5) onto the coupling of the drive unit (11).
- > Set the anti-rotation device (A) in the correct position relative to the dosing unit (10).
- Fully assemble the dosing unit (10) and the drive unit (11).
- Lightly turn the set screws (14), the drive unit (11) has now been centred properly.



### 4.1.4 Feeding material and bleeding the dispenser for the first time

- Connect the material supply (feed line, cartridge) to the material inlet (A) of the dispenser.
- Pressurise the material.
- Attach the transparent tube (2) (with an inner diameter of 4 mm) to the bleed valve (23). Ensure that the tube used is sufficiently long (approx. 15 cm) and is capable of holding all the material required for the bleeding process. You can then dispose of this conveniently at the end of the process.
- Slowly open the bleed valve (23) by approx. ½ turns and wait until the material comes out bubble-free.
- Close the bleed valve (23) and detach the tube.

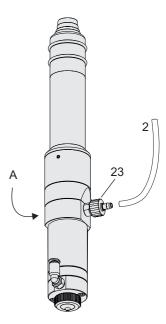


Fig. 6



#### 4.1.5 Calibration

To obtain a precise spraying result, the dosing quantity must be calibrated. This is performed using the eco-CONTROL EC200 dosing control unit. The exact procedure can be found in the dosing control unit manual.

## 4.2 Switching on, starting dosing process

Daily at the start of the shift / when starting work, perform the activities as described in Section 5.1 "Maintenance intervals" (page 19).

#### **NOTE**

The supply of material to the dispenser must be ensured before dosing starts. Dry running may destroy the stator.

- Start supply of material to the dispenser.
- If present, remove cover.
- Start the compressed air supply to the dispenser.
- Switch on the dosing control unit.
- Check the dosing quantity to ensure that the spraying result is consistent. If there are deviations, dosing must be calibrated. The exact procedure can be found in the dosing control unit manual. The result of the check must be recorded together with the name of the tester, date and time.
- Start the spraying process using the dosing control unit.

## 4.3 Switching off, ending dosing process

- ▶ The spraying process is switched off using the dosing control unit. The exact procedure can be found in the dosing control unit manual.
- Switch off the material supply to the dispenser.
- Switch off the compressed air supply to the dispenser.
- Switch off dosing control unit and secure it against unauthorised restarting.
- Clean the precision dosing needle and air cap.
- Seal outlet opening (e.g. with cover).

## 4.4 Decommissioning

All activities described below may only be carried out by authorised maintenance staff.

- Switch off the drive to the dispenser and lock it to prevent it from being switched on again.
- Shut down the compressed air supply to the dispenser (depressurise).
- Shut down material supply to the dispenser (depressurise).
- Relieve inlet pressure via bleed screw (23).
- Remove material supply and seal openings with suitable plug.
- Disconnect the power supply to the drive units.
- Remove the dosing unit and the drive unit from the holder or system.
- Disconnect the dosing unit and drive unit.
- Remove the stator, clean and store separately.
- Disassemble and clean dispenser.
- Store dispenser according to the storage conditions as described in Section 2.8 "Transport and storage" (page 12).

## 4.5 Re-commissioning

Re-commissioning is the same as initial commissioning. The same specifications and work steps apply as described in Section 4.1 "Initial commissioning" (page 14). It must be ensured that the dispenser is free of medium residues, dust and dirt.

The stator must be installed before recommissioning (see Section 4.1.2 (page 15)).



# 5 Maintenance

In the event of a fault, or if there is any doubt that the machine/system is not completely ready for operation, it must be shut down immediately and inspected by competent maintenance staff before operation continues.

#### **⚠** WARNING

Maintenance and cleaning work may only be carried out when the machine has been shut down safely and secured against unauthorised restarting. Otherwise, serious injuries may result.

- · Switch off the dosing control unit.
- · Disconnect the dosing control unit's power cable from the power supply

#### 5.1 Maintenance intervals

In order to ensure problem-free operation, we recommend complying with the following maintenance intervals.

| When                 | Activity   | Who |
|----------------------|--|-----|
| Start of shift/daily | Visual check for leaks / contamination / damage. | 1   |
| End of shift         | Clean the precision dosing needle / air cap.     | 1   |
| Every year           | Disassemble the dispenser, clean and check all   |     |
|                      | parts such as stator, rotor assembly, seals,     | 2   |
|                      | bearings and housing and replace if required.    |     |

<sup>1 =</sup> Operating staff

The recommended change cycles are based on empirical values for dosing applications. The empirical values are based on different material properties, pressure conditions and dosing settings. Depending on the material used, the required change cycles may differ from the recommended cycles.

Ambient conditions, such as temperature and humidity, may affect the change cycles.

<sup>2 =</sup> Maintenance staff

# 5.2 Troubleshooting

| Fault                              | Possible cause                 | Action                         |
|------------------------------------|--------------------------------|--------------------------------|
|                                    | Motor not connected            | Connect the motor              |
|                                    | Fault with mains supply        | Check electrical installation  |
|                                    | Material hardened/set          | Dismantle and clean the        |
|                                    |                                | dispenser                      |
|                                    | Dosing needle blocked          | Clean/replace dosing needle    |
| No or too little material          | Stator/rotor worn              | Replace stator/rotor           |
| feeding                            | Stator swollen                 | Check resistance of the stator |
| leeding                            |                                | to the material and replace    |
|                                    |                                | stator                         |
|                                    | Feed speed too low             | Correct feed speed             |
|                                    | Inadequate supply of material  | Feed material, check inlet     |
|                                    |                                | pressure and correct if        |
|                                    |                                | required                       |
|                                    | Suck-back not set correctly    | Adjust the suck-back           |
| Drinning or running on             | Air bubbles in the material    | Bleed dispenser / material     |
| Dripping or running on of material |                                | pipes                          |
| UI IIIalciiai                      | Material compressible          | Degas the material             |
|                                    | Follow-up spray time too short | Increase follow-up spray time  |

If you have any questions about commissioning, maintenance, repairs or ways to optimise your processes, our Service employees will be happy to help.

You can reach us at: support@preeflow.com

We will respond to your service enquiry in German or English.



## 5.3 Stator change

All activities described below may only be carried out by authorised maintenance staff.

#### Preparation

- Disconnect the dosing control unit from the power supply.
- Unplug the power supply to the drive unit.
- Shut down material supply (depressurise).
- Relieve inlet pressure via bleed screw.
- Remove material supply and seal openings with suitable plug.

#### Removing the stator

- ▶ Disassemble the dispenser as described in Section 4.1.1 (page 14).
- Couple the assembly aid (6) to the bearing housing (13).
- Unscrew stator (7) with assembly aid (6).

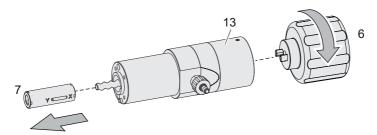


Fig. 7

#### Fitting the stator

Install the stator as described in Section 4.1.2 (page 15).

## 5.4 Dismantling before cleaning

When cleaning the dispenser, attention must be paid to the chemical properties and chemical reactions of the material. In doing so, observe and comply with the corresponding specifications of the product data sheet. If you have any queries, contact the manufacturer of the material.


All activities described below may only be carried out by authorised maintenance staff.

#### Preparation

- Disassemble the dispenser as described in Section 4.1.1 (page 14).
- Remove the stator as described in Section (page 21).

#### Removing the rotor assembly

- Unscrew the valve attachment (32) for the bleed valve (23).
- ▶ Unscrew four screws (26) and pull off the pump housing (19) from the bearing housing (13).
- Unscrew two screws (4) and pull off the sealing set with housing (25) from the bearing housing (13).

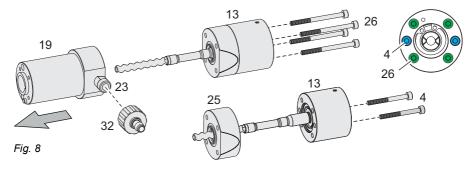

#### NOTE

Do not flush the bearing housing (13) and the sealing set with housing (25).

This can damage the bearings! Clean it only with a cloth and brush.

Do not disassemble the bearing housing (13) and the sealing set with housing (25) into their individual components.

#### **Assembly**

After cleaning, the dispenser is assembled in reverse order. Do not exceed a tightening torque of 0.35 Nm when mounting the screws (26/4).



# 6 Cleaning



Cleaning work may only be carried out when the machine has been shut down safely and secured against unauthorised restarting. Otherwise, serious injuries may result.

- Switch off the dosing control unit.
- Disconnect the dosing control unit's power cable from the power supply

If the dispenser is soiled with material or if the dispenser is disassembled and cleaned, use a cleaning agent which matches the material. The information in the safety data sheet must be complied with.

Recommended cleaning agents, e.g. cellulose thinner, cleaner's solvent or alcohol.

Note the following points regarding the use of cleaning agents and the performance of cleaning work:

- · Observe the specifications in the safety data sheet for the cleaning agent
- Personal protective equipment must be worn
- · Compatibility with the materials installed in the pump must be checked before use
- The cleaning agent must be used according to the manufacturer's specifications (e. g. application time)
- Cleaning agents must not penetrate electrical or mechanical system components
- · Do not use pressure or steam cleaners
- · Completely remove cleaning agent again
- Dispose of cleaning agent properly
- Re-attach any protective and safety devices or cladding removed and check that they function correctly
- Use a metal-free tool (do not use steel wool or a screwdriver)

# 7 Spare parts

Every time you order spare parts, please state the type identifier, serial number and order number.

The serial number is engraved on the bearing housing (13).

# 7.1 Item list of the spare parts

| Item | Description  | Х | pcs | Part No. | Material  |
|------|--|---|-----|----------|-----------|
|      | Combi package comprising part no.: 21448, 20120 ,21499 |   |     | 21500    |           |
|      | eco-SPRAY dispenser                                    |   |     | 21448    |           |
|      | eco-CONTROL EC200-K dosing control, compl.             |   |     | 20120    |           |
|      | eco-CONTROL SC1200 control unit                        |   |     | 21499    |           |
|      | eco-SPRAY dosing unit, compl.                          |   |     | 21447    |           |
| 2    | eco-SPRAY cap nut                                      |   | 1   | 21374    | A2        |
| 3    | Air housing spray                                      |   | 2   | 21373    | A2        |
| 4    | Allen screw M3 x 20                                    |   | 2   | 20250    |           |
| 5    | Star-shaped coupling                                   | Х | 1   | 20050    | Elastomer |
| 6    | Assembly aid   |   | 1   | 20108    | PA 6      |
| 7    | Stator, compl.   | Х | 1   | 20001    | VisChem   |
| 8    | Allen screw M3 x 12                                    |   | 6   | 20828    | A2        |
| 9    | Connecting cable for drive unit (1.5 m)                |   | 1   | 20784    |           |
| 11   | eco-SPRAY drive unit, compl.                           | Х | 1   | 21449    |           |
| 13   | Bearing housing with eco-SPRAY rotor assembly, compl.  | Х | 1   | 21507    |           |
| 14   | Set screw  |   | 2   | 20029    |           |
| 19   | eco-SPRAY pump housing                                 |   | 1   | 21501    | A2        |
| 21   | O-ring R 13 x 1.25                                     | Х | 1   | 20011    | FFKM      |
| 22   | O-ring R 15 x 1.5                                      | Х | 1   | 20084    | FKM       |
| 23   | Bleed valve with M5 nipple, shortened                  |   | 1   | 21464    |           |
| 24   | O-ring R 16 x 1.02                                     | Х | 1   | 20007    | FKM       |
| 25   | Sealing chamber with eco-SPRAY housing                 | Х | 1   | 21508    |           |
| 26   | Allen screw M3 x 40                                    |   | 4   | 20585    | A2        |
| 27   | eco-SPRAY end piece                                    |   | 1   | 21411    | A2        |
| 28   | Conical precision dosing needle ø 0.2 mm               | Х | 1   | 21455    | A2        |
|      | Conical precision dosing needle ø 0.3 mm               | Х | 1   | 21454    | A2        |
|      | Conical precision dosing needle ø 0.5 mm               | Х | 1   | 21453    | A2        |
| 29   | eco-SPRAY air cap ø 1.45                               |   | 1   | 21378    | A2        |
|      | eco-SPRAY air cap ø 1.7                                |   | 1   | 21379    | A2        |
|      | eco-SPRAY air cap ø 2.0                                |   | 1   | 21380    | A2        |
| 30   | O-ring R 11 x 1  | Χ | 1   | 21460    | FKM       |




| Item | Description                                   | Х | pcs | Part No. | Material |
|------|---|---|-----|----------|----------|
| 31   | Nozzle mounting tool for precision nozzles    |   | 1   | 21291    | A2       |
| 33   | Blanking plate for eco-SPRAY heating assembly |   | 1   | 21502    | A2       |
| 34   | Push-in L fitting                             |   | 1   | 120308   |          |

X = Recommended spare parts and wearing parts

To avoid costly downtime, we recommend keeping a stock of spare and wearing parts.

# 7.2 Overview drawing of the spare parts

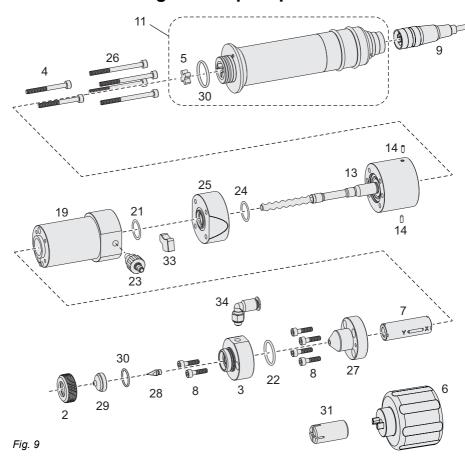

# 8 Technical specifications

#### 8.1 Installation declaration

Within the meaning of EU Directive 2006/42/EU on Machinery Annex II B

We.

ViscoTec Pumpen- u. Dosiertechnik GmbH Amperstraße 13 D-84513 Töging am Inn,

hereby declare that, in the design and manufacture of the incomplete machine described below, the following basic requirements of EU Directive 2006/42/EC have been applied and complied with: 1.1.2, 1.1.3, 1.1.5, 1.3.2, 1.5.4, 1.6.1, 1.6.2, 1.7.4, 1.7.4.1, 1.7.4.2

We declare in addition that the special technical documents were drawn up in accordance with Annex VII part B of this Directive. Where applicable, the incomplete machine corresponds in addition to the stipulations of Directives 2014/35/EC on electrical equipment and 2014/30/EC on electromagnetic compatibility.

Product designation: eco-SPRAY

We undertake to convey to the market supervisory authorities, at their justifiable request, the special documents concerning the incomplete machine in electronic form via our documentation department.

The incomplete machine may only be put into operation once it has been determined, as required, that the machine or unit into which the incomplete machine is to be installed complies with the stipulations of Directive 2006/42/EC on machinery and that the EU Declaration of Conformity has been produced in accordance with Annex II A.

Töging am Inn, June 3, 2020

Martin Stadler

Managing Director and authorised representative



## 8.2 Technical data

| eco-SPRAY                      |   |
|--------------------------------|---|
| Weight                         | approx. 650 g   |
| Heating                        | Optional  |
| Minimum operating pressure     | 0 bar, with self-levelling liquid                           |
| Maximum operating pressure     | 6 bar, with non self-levelling liquid                       |
| Maximum dosing pressure 1)     | 20 bar  |
| Self sealing 1)                | approx. 2 bar (reference material approx. 10 mPas at        |
|                                | 20 °C)  |
| Repeatability                  | > 99 %  |
| Dosing volume, approx.         | 0,05 ml/rotation  |
| Volume flow <sup>2)</sup>      | 0.5 to 6.0 ml/min   |
| Motor                          | 18 to 24 V DC, incremental encoder, planetary gear          |
| Protection class according to  | IP54  |
| DIN EN 60529                   |   |
| Operating conditions           | +10 ° to +40 °C, air pressure 1 bar, relative humidity less |
|                                | than 60% (non-condensing)                                   |
| Material temperature 3)        | +10 °C to +40 °C  |
| Material inlet                 | 1/8"cylindrical Whitworth pipe thread DIN/ISO 228           |
| Compressed air hose connection | Outer diameter 4 mm   |
| Pressure of atomiser air (bar) | 0.1 to 6  |
| Quality of atomiser air        | Dust free, oil free, dehumidified                           |
| Switching frequency            | Over 100 cycles/min   |
| Spray pattern                  | Circular jet (variable)                                     |
| Spray angle                    | 15 to 30°   |
| Minimum spray amount (μl)      | 50  |
| Spray accuracy <sup>4)</sup>   | Spray amount ±1 %   |
| Storage conditions             | see page 12   |
| Sound level, (dB(A)) 5)        | 83  |

<sup>&</sup>lt;sup>1)</sup> max. dosing pressure and self-sealing decrease with decreasing viscosity and increase with increasing viscosity. Consult with the manufacturer.

<sup>&</sup>lt;sup>2)</sup> Volume flow is dependent on the viscosity, inlet pressure

<sup>3)</sup> depending on the dosing material


<sup>&</sup>lt;sup>4)</sup> volumetric dosing as absolute deviation relative to one dispenser rotation. Depending on the viscosity of the dosing material.

<sup>&</sup>lt;sup>5)</sup> Measurement at 1 m distance and with 6 bar compressed air (air cap 3.6 mm, precision dosing needle 2.0 mm, 15 mm, distance to surface, without material).

## 8.3 Materials used

| Components in contact with the material   | Material           |  |  |
|---|--------------------|--|--|
| Dispenser housing, spray head             | Stainless steel A2 |  |  |
| Dispenser parts, motor housing            | Anodized aluminium |  |  |
| Screws, washers, etc.                     | Stainless steel A2 |  |  |
| Stator elastomer, flexible shaft covering | VisChem            |  |  |
| Shaft sealing rings                       | Z80                |  |  |
| O-rings                                   | FFKM, FKM          |  |  |
| Drive shaft, rotor                        | Stainless steel A4 |  |  |

## 8.4 Dimensions

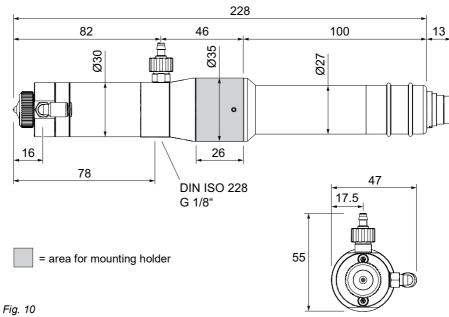



# 9 Disposal

The dispenser must be removed by competent maintenance staff.

Disposal may only be performed in line with the currently applicable, country-specific specifications, standards and legislation.

Ensure environmentally friendly recycling of all materials.

Electrical parts must not be disposed of with household waste (2012/19/EU). They must be taken to the collection points provided for this purpose or disposed of in an environmentally appropriate way.



# 10 Accessories

In addition to the standard spare parts listed in Section 7.1 (page 24), special solutions are available upon request, for example

- · Precision dosing needle and air cap with other holes
- · Rotor/stator in alternative materials
- · Fastening elements
- · Process connections

Please contact us if required: info@preeflow.com

| Notes |       |      |      |   |
|-------|-------|------|------|---|
|       |       |      |      |   |
|       |       |      |      |   |
|       |       |      |      |   |
|       |       |      |      |   |
|       |       |      |      |   |
|       |       |      |      |   |
|       |       |      |      |   |
|       |       |      |      |   |
|       |       |      |      |   |
|       |       |      |      |   |
|       |       |      |      |   |
|       |       |      |      |   |
|       |       |      |      |   |
|       |       |      |      |   |
|       |       |      |      |   |
|       |       |      |      |   |
|       |       |      |      |   |
|       |       |      |      |   |
|       |       |      |      |   |
|       |       |      |      |   |
|       |       |      |      |   |
|       |       |      |      |   |
|       |       |      |      |   |
|       |       |      |      |   |
|       |       |      |      |   |
|       |       |      |      |   |
|       |       |      |      |   |
|       |       |      |      |   |
|       |       |      |      |   |
|       | <br>  | <br> | <br> |   |
| ·     | <br>· | <br> | <br> | · |



| Notes |  |
|-------|--|
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |

## Überreicht durch:



Gewerbepark 13 85402 Kranzberg Germany

www.dosieren.de



© Copyright 2020

ViscoTec Pumpen- u. Dosiertechnik GmbH Amperstraße 13 D-84513 Töging am Inn Germany

This document is protected by copyright. It must not be modified, extended, reproduced or distributed to third parties without written consent.

Subject to technical and editorial change.

Translation of original operation manual

Document no. / Version INST-002759 / A